




ROSSI®

OWNER'S MANUAL

Single Shot Polymer Survival Rifle

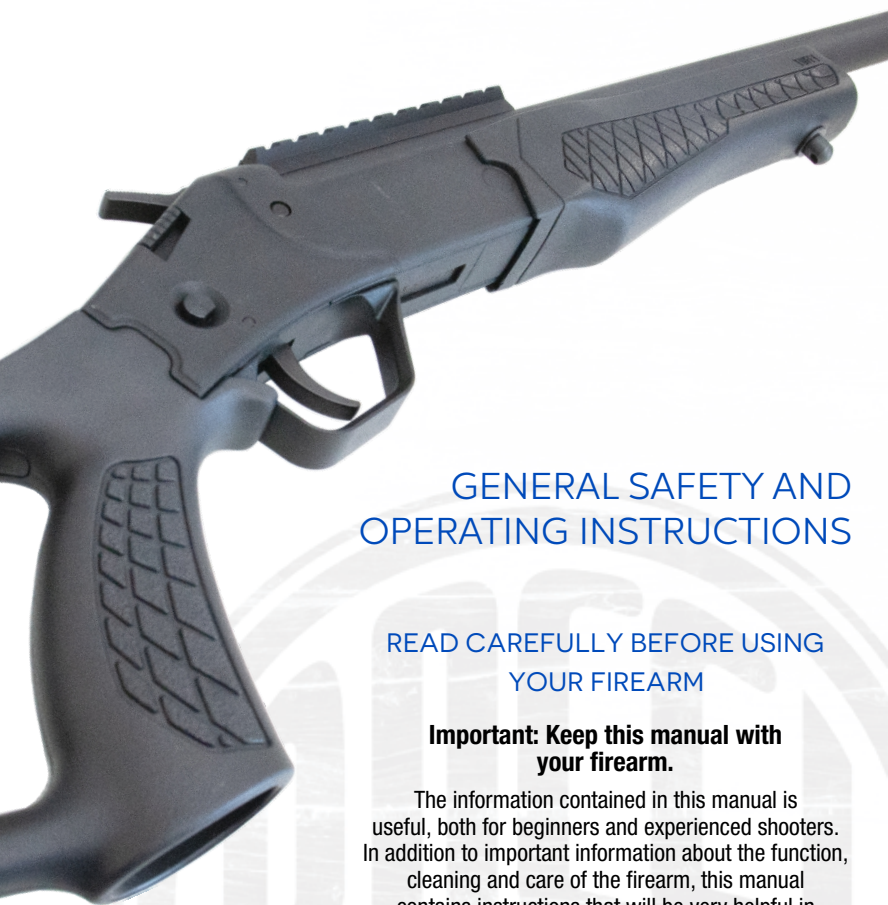

GENERAL SAFETY AND OPERATING INSTRUCTIONS

READ CAREFULLY BEFORE USING
YOUR FIREARM

**Important: Keep this manual with
your firearm.**

The information contained in this manual is useful, both for beginners and experienced shooters. In addition to important information about the function, cleaning and care of the firearm, this manual contains instructions that will be very helpful in shooting safely. **The most important rule of safe firearm handling is to: ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.**

TO OUR CUSTOMERS

Congratulations on the purchase of your new Rossi firearm. Like any precision instrument, if properly cared for, your Rossi should give you a lifetime of shooting enjoyment. Please take the time to read and understand the warnings and instructions contained in this owner's manual. This manual should be kept with your firearm. Upon change of ownership, transfer this manual with the firearm.

NOTICE

It is recommended that you record the model number, serial number and date of purchase of your Rossi firearm for future reference. Be sure to retain your store receipt and any other documentation that came with your Rossi.

WARNING

The safety warnings in this booklet are important. By understanding the dangers inherent in the use of any firearm, and by taking the precautions described herein, you can safely enjoy your Rossi® firearm. Failure to follow any of these warnings may result in serious injury to you or others, as well as severe damage to the firearm or other property.

Model Number	
Serial Number	
Date of Purchase	

TABLE OF CONTENTS

6	Firearm Safety
8	Firearm Safety Systems
9	Get to Know your Firearm
11	Firearm Storage and Gun Locks Ammunition
15	Manual Safety
16	Operating Instructions
18	De-cocking How to Load your Firearm
19	Choke
20	How to Fire
21	What to do if your Firearm Fails to Fire Unloading your Firearm
22	Take Down Instructions Care and Maintenance
23	Repair Instructions
24	Exploded View and Parts List
26	Parts Repair Policy

ROSSI

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

Intentionally Left Blank

NOTES

SIGNAL WORDS AS DEFINED BY ANSI Z535.6 AND Z535.4 STANDARDS.

 **DANGER**

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

 **WARNING**

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

 **CAUTION**

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

ROSSI

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

FIREARM SAFETY

DANGER

When a firearm discharges, the bullet or shot can strike a person, resulting in death or serious bodily injury.

The three basic keys to safe handling of firearms:

1. **KEEP YOUR FINGER OFF THE TRIGGER UNTIL YOU ARE READY TO FIRE.** If you maintain good trigger discipline, it is extremely unlikely the firearm will fire.
2. **KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.** Even if the firearm discharges, if the muzzle is pointed in a safe direction, no one will be injured.
3. **NEVER TRUST ANY SAFETY MECHANISM.** If you adopt the attitude that you will not trust any safety mechanism, you will be vigilant about keeping your finger off the trigger and keeping the muzzle pointed in a safe direction.

WARNING

KNOW YOUR TARGET. Never fire at targets at close range. Ricochets can and do cause death or serious bodily injury. What constitutes "close range" depends on many factors including target material, bullet caliber and angle of impact.

KNOW WHAT IS BEHIND YOUR TARGET. Unless you are shooting into a bullet trap designed to capture the type of ammunition you are firing, projectiles may pass through the target and strike anyone or anything beyond. Bullets can travel miles.

ALWAYS WEAR HEARING PROTECTION. Firearms are loud. The sound they generate is greater indoors. Repeated exposure to loud noises can cause deafness. Hearing protection is rated by decibel reduction. Look for "dB" reduction of 30 or more when purchasing ear protection. Modern ear protection can allow normal hearing until the sound from the discharge reaches the ear. Significant protection can be achieved by layering hearing protection, for example wearing 30db rated foam plugs along with 20db rated ear muffs.

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

ALWAYS WEAR EYE PROTECTION. In normal operation, firearms emit hot high-velocity gases, particles and metal. These materials flying into your eye can cause blindness. Protect your vision with proper eye protection. Any eye protection may be better than none, but look for ANSI Z87.1-2003 certified eyewear for the best protection.

NEVER HANDLE FIREARMS WHILE UNDER THE INFLUENCE OF DRUGS OR ALCOHOL. Firearms are dangerous. Handling firearms while impaired by drugs or alcohol is foolhardy and may result in serious injury or death. This warning includes prescription drugs that contain a warning about using machinery or driving while taking the medication.

MODIFIED FIREARMS ARE DANGEROUS, AND USE CAN RESULT IN SERIOUS INJURY OR DEATH. "Trigger jobs", polishing original components or installing aftermarket parts can cause a firearm to function in ways different than intended. Some such work may also be illegal.

DAMAGED FIREARMS ARE DANGEROUS, AND USE CAN RESULT IN SERIOUS INJURY OR DEATH. Repairs should always be made by a qualified gunsmith or by a factory-authorized repair site. Work done by those unfamiliar with the design can cause a firearm to function in ways different than intended.

NEVER ATTEMPT TO DISASSEMBLE OR CLEAN A LOADED FIREARM. DOING SO CAN RESULT IN SERIOUS BODILY INJURY OR DEATH.

How often have we heard "But it went off while I was cleaning it!" or, "I did not know it was loaded!" or, "It was jammed, and I tried to take it apart!"?

IF A FIREARM GOES OFF, THERE WAS A ROUND OF AMMUNITION IN THE CHAMBER. Period. "Clear" (or empty) the firearm of all ammunition before disassembling or cleaning.

As owner of your new Rossi firearm, you are responsible for (1) keeping your finger off the trigger, (2) pointing the muzzle in a safe direction, (3) removing ammunition from the firearm, and (4) looking and feeling in the chamber to confirm the firearm is empty. An empty firearm cannot fire.

ROSSI

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

FIREARM SAFETY SYSTEMS

Firearms safety is supported by a system. With your firearm the system is made up of the following:

1. **You!** Your involvement in safety cannot be overemphasized. No safety component can keep your finger off the trigger and the muzzle pointed in a safe direction. Also, you are the key to never trusting any of the mechanical parts of the safety system.
2. **Manual Safety -**
Always use the manual safety.
The manual safety button is located at the rear of the receiver and must be manually pressed to the desired position. See fig 1 and fig 2.
3. **Trigger guard -** This is a physical obstruction that helps prevent unintended pressing of the trigger. Do not modify the trigger guard.
4. **This Manual -** Rossi intends for you to use this manual to learn about your firearm and to help you use your firearm safely.
If you use the manual, you will be a long way toward being a knowledgeable and safe firearms owner.
5. **Online Resources -** RossiUSA.com hosts a library of videos concerning safety and related issues. This library is being added to and revised. Please visit the site and take advantage of what is available there as part of your education regarding using your Rossi firearm in a safe fashion.



FIG 1

(Manual Safety ON)



FIG 2

(Manual Safety OFF)

GET TO KNOW YOUR FIREARM

FIG 3: TRIGGER LOCK

Please refer to the addendum that comes with the trigger lock on how to install your trigger lock.




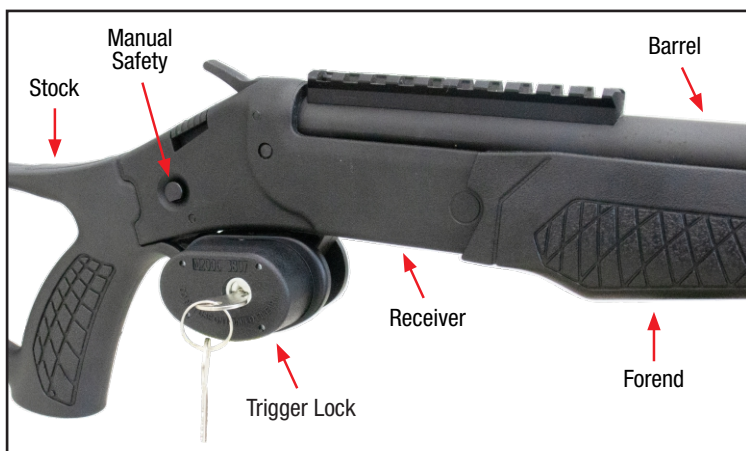


FIG 4: LEFT-SIDE

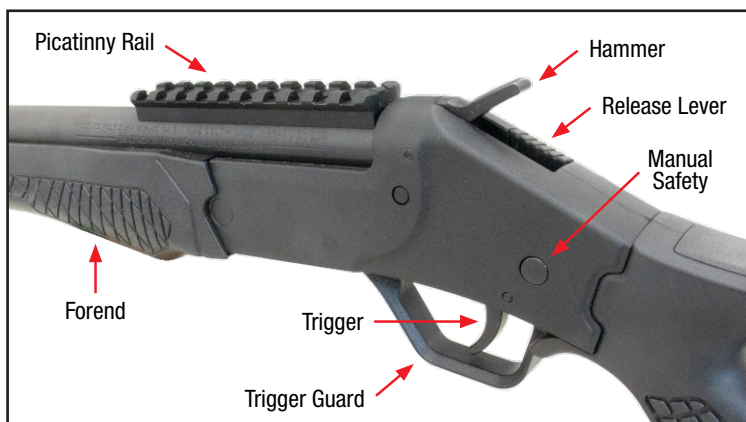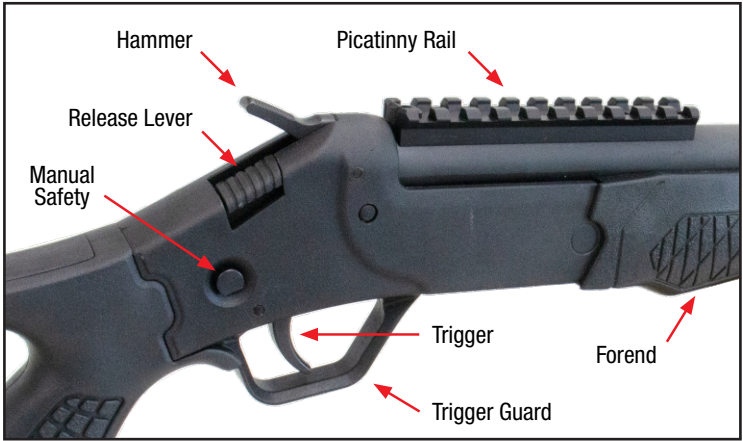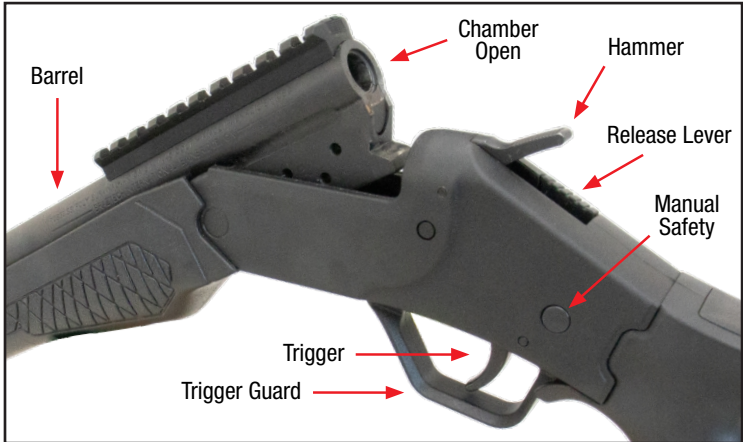

ROSSI

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

FIG 5: RIGHT-SIDE**FIG 6: BREAK-OPEN**

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

FIREARMS STORAGE AND GUN LOCKS

How you secure your firearm is a personal choice based on the unique circumstances in your home, business or vehicle and the laws of the state where your firearm is located. Any choice you make about securing your firearms will present advantages and disadvantages. You must weigh those advantages and disadvantages and choose which security method is best for you and those around you.

WARNING - LOCKING

Never lock a firearm with a round of ammunition in the chamber. Unlocking a loaded firearm makes it more difficult to maintain trigger discipline and to keep the muzzle pointed in a safe direction.

WARNING

Failure to secure a firearm may result in injury or death. Properly securing a firearm means storing your firearm unloaded, decocked and securely locked, with all ammunition in a separate location.

AMMUNITION

WARNING

Using the wrong ammunition in your firearm can result in serious bodily injury and damage to your firearm. Make certain the ammunition you load in the chamber is the same caliber as is marked on the barrel.

DANGER

Do not use .454 Casull ammunition.

ROSSI

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

**WARNING - AMMUNITION AND INDUSTRY STANDARDS**

Use only clean, dry factory-loaded ammunition. Old, damaged, wet or oily ammunition may fire at pressures higher than industry standard, causing injury to you and bystanders or damage to your firearm.

Do not use reloaded ammunition in your firearm. Its firing pressures are unknown and may well exceed industry standard, causing injury to you and bystanders or damage to your firearm.

Odd sounds are signs of trouble. If a round “does not sound right” when it goes off, stop firing right away. A bullet may be stuck in the barrel. Firing the firearm in this condition may cause pressures higher than industry standard, causing injury to you and bystanders or damage to your firearm.

If you hear any odd sounds when shooting, stop firing immediately. If there is any reason to suspect that the barrel is obstructed, immediately unload the firearm and make it clear. Visually inspect the bore for blockage. It is not sufficient to merely look in the chamber. Shot and/or the wad or the bullet may be lodged in the barrel where it cannot be easily seen. If you do not see light when inspecting the bore, something is stuck in the barrel. Do not shoot again, and take the firearm to a qualified gunsmith or contact the Rossi Service Department at 800-327-3776.

**WARNING**

If the bore is obstructed, DO NOT attempt to shoot it out by using another shot shell or cartridge or by blowing it out with a blank. Such techniques can generate excessive pressure, damage the firearm and cause serious injury.

**WARNING**

“+P” ammunition can be dangerous. There is a detailed discussion about “+P” and “+P+” ammunition on page 13 of this manual. Until you have read that information, do not fire any ammunition marked “+P” in your firearm.

 WARNING

Never fire ammunition marked “+P+” in your firearm. It does not comply with industry standards as to chamber pressures.

There are only four calibers that can carry a “+P” rating from SAAMI. They are 38 Special +P, 9mm Luger +P, 38 Super Automatic and 45 Automatic +P. There are no other SAAMI approved “+P” loads. Any ammunition in any other caliber marked “+P” is not SAAMI compliant, may be dangerous and should not be used.

 WARNING**LEAD AND HAZARDOUS CHEMICAL EXPOSURE**

Discharging firearms in poorly ventilated areas, handling, and / or cleaning firearms or handling ammunition can expose you to chemicals including lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov

Have adequate ventilation at all times. Wash hands thoroughly after exposure with soap and water.

The use of reloaded, “remanufactured”, hand-loaded, or other nonstandard ammunition voids all warranties. Improperly loaded ammunition voids all warranties. Improperly loaded ammunition can be extremely **dangerous**. Severe damage to the firearm and serious injury to the shooter or to others may result. Always use ammunition that complies with the industry performance standards established by the Sporting Arms and Ammunition Manufacturers Institute, Inc., of the United States (SAAMI).

ROSSI

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

⚠ WARNING

Shot, wads or bullets can become lodged in the barrel if the shot shell or cartridge has been improperly loaded without propellant powder, or if the powder fails to ignite. Odd sounds are signs of trouble. If a round "does not sound right" when it goes off, a round might be stuck in the barrel. Do not shoot the firearm again. Check the barrel and chamber for any obstruction prior to using your firearm again. If you don't see light, there is something stuck in the bore. Do not shoot your firearm again and take it to a qualified gunsmith or contact the Rossi Service Department at 800-948-8029.

⚠ WARNING

Dirt, corrosion, or other foreign matter on a shot shell or cartridge can impede complete chambering and may cause the shot shell or cartridge to burst upon firing. The same is true of shot shells or cartridges which are damaged or deformed. Do not use any shot shell or cartridges that show any kind of damage or corrosion.

⚠ WARNING

Do not oil shot shells or cartridges, and be sure to wipe the chamber clean of any oil or preservative before starting to shoot. Oil interferes with the friction between shot shell or cartridge case and chamber wall that is necessary for safe functioning, and subjects the firearm to stress similar to that imposed by excessive pressure.

NOTICE - STEEL SHOT USE

Steel shot is abusive and is **not recommended** for continuous usage as it can cause premature wear on the choke and thread protector.

MANUAL SAFETY

These firearms are manufactured with a manual safety button - **USE IT!**



(Manual Safety ON)



(Manual Safety OFF)

WARNING

Your firearm is equipped with the manual safety shown above. A manual safety is no substitute for safe, smart firearm handling.

The manual safety button is located at the rear of the receiver. To engage the manual safety, push the manual safety button from left to right so the **RED** band is not visible.

To disengage the manual safety, push the manual safety button from right to left. In the disengaged position, the **RED** band will be visible indicating that the firearm is ready to fire.

WARNING

Do not touch the trigger while engaging the manual safety button. Never keep pressure on the trigger while closing the breech, even if the manual safety is engaged.

Trigger - The firearm will fire when the manual safety button is disengaged (the **RED** band will be visible) and the trigger is pulled. Never put your finger on the trigger if you are not ready to fire at the target.

ROSSI

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

OPERATING INSTRUCTIONS

1. These firearms have a "transfer bar" firing mechanism. This means that when the hammer is in the fully forward (rest) position, and the trigger is released, there is no mechanical contact between the hammer and the rear of the firing pin.
2. When carrying the firearm, the manual safety button should be "on" and the hammer fully forward in the rest position (Fig 7).
3. When the hammer is manually pulled back to its rearmost position (full cock), the transfer bar moves up and is positioned between the hammer and the firing pin. Pressing the trigger causes the hammer's face to contact the transfer bar, which then strikes the firing pin and discharges the shot shell or cartridge. When the trigger is released, the transfer bar drops down leaving a space between the face of the hammer and the firing pin.



WARNING

These firearms are designed so that the barrel and chamber cannot be either opened or closed when the firearm is fully cocked. Attempting to force the chamber open or closed will damage your firearm and could result in accidental death or serious injury.

WARNING

Fully open the breech before inserting a cartridge. Attempting to insert a cartridge in a partially opened breech can result in serious injury or death.

WARNING

If you experience a problem loading or unloading the firearm, or if ***the rim of a live cartridge slips behind the extractor***, do not attempt to close the gun or it may fire, resulting in serious personal injury or death.

- 1. If a fired shell casing is stuck in the barrel:** With the muzzle pointed in a safe direction, press down on the opening lever and pull down the forend (see page 19). While staying clear of the muzzle, drop a cleaning rod down the barrel. The shell casing should drop free. If not, repeat the process. Take care not to damage the barrel. If the shell casing remains stuck, it should be removed by a qualified gunsmith.

WARNING

If a live cartridge is stuck in the barrel, the primer may ignite firing the cartridge, resulting in serious personal injury or death. Take the firearm to a gunsmith to remove the jammed cartridge.

- 2. If a cartridge is stuck in the barrel and you are unsure if it fired or not:** Keep the muzzle pointed in a safe direction. Treat it as a live round and handle in accordance with "WHAT TO DO IF FIREARM FAILS TO FIRE" on page 21.

WARNING

The danger of personal injury or death associated with cartridges, fired or unfired, becoming stuck in a firearm can be reduced by using new, clean, factory-loaded ammunition and never forcing ammunition into a chamber. If you have to force ammunition into the chamber, something is wrong! Stop! Take the firearm to a qualified gunsmith.



WARNING - ANY GUN MAY FIRE IF DROPPED

If dropped or struck, the firearm may fire.

WARNING

If dropped or struck the firearm should be inspected by a qualified armorer / gunsmith for a complete function check. After the firearm was dropped or struck, mechanisms, including automatic safeties, may not function as intended resulting in accidental death or serious injury.

ROSSI

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

DE-COCKING

WARNING

You should practice this method with an unloaded firearm until you are completely familiar and comfortable with this procedure.

If the firearm is fully cocked, and you want to place the hammer in the rest position, then you must do the following:

1. KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.
2. PUT THE SAFETY BUTTON ON.
3. WHILE CAREFULLY HOLDING AND CONTROLLING THE HAMMER WITH YOUR THUMB, PULL THE TRIGGER, SLOWLY AND CAREFULLY LET THE HAMMER MOVE FORWARD APPROXIMATELY $\frac{1}{2}$ " AND THEN RELEASE THE TRIGGER. CONTINUE TO LET THE HAMMER DOWN SLOWLY UNTIL IT IS RESTING ON THE MANUAL SAFETY BAR.

HOW TO LOAD YOUR FIREARM

WARNING


Before loading this or any firearm, always check the bore to be sure it is free of grease, oil or any other obstruction. **BE SURE** the chamber is empty and the entire barrel is clear. Open the breech and visually check the full length of the barrel for any obstruction. Failure to do so may damage your firearm and can result in accidental death or serious injury.

WARNING

Do not rely on the color of a shotgun shell to determine the gauge or bore. Always check the box and the headstamp of the actual shell **BEFORE** loading. Failure to do so may damage your firearm and can result in accidental death or serious injury.

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

1. With the muzzle pointed in a safe direction and with the manual safety "ON", press down on the release lever (see figure 10) and pull down the forend.
2. Insert the appropriate shot shell or cartridge in the chamber.
3. Lift up on the forend to close the breech.

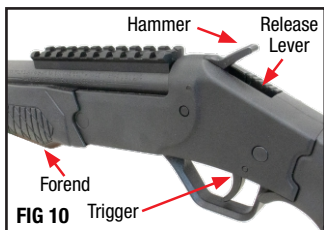

(Manual Safety ON)




Chamber Open

⚠ WARNING


Keep your face away from the chamber when opening the firearm's breech. Cartridges and shells ejecting from the chamber can cause injury.

CHOKE


The use of both ammunitions - .45LC and .410 - requires the exchange of choke in order to operate the firearm safely and accurately.

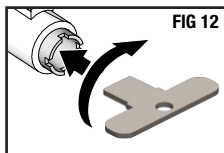

Clockwise to loosen

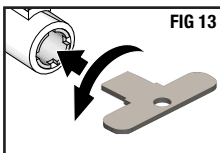

Counter-clockwise to tighten

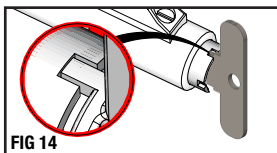


Fit the choke key with choke slots

⚠ WARNING


Do not use the STRAIGHT RIFLED CHOKE when shooting .45LC or .410 solid slugs. Remove the straight rifled choke and install the THREAD PROTECTOR SLEEVE.

ROSSI

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

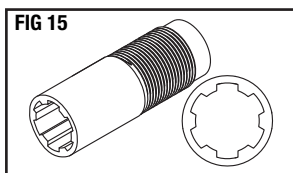

STRAIGHT RIFLED CHOKE
Caliber .410

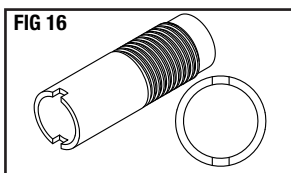

THREAD PROTECTOR SLEEVE
Caliber .45LC or .410 solid slugs

Inspect choke tubes regularly to insure they are properly installed and in good condition. Pay special attention to the threaded end of the choke tube and be sure it is not deformed or dented.

Never fire without a choke properly installed. Failure to do so will damage the precision threads on the inside of the barrel. Firing the gun with loose choke tubes may damage the choke and barrel, as well as serious injury to you and those around you.

⚠ WARNING

Check the choke tube regularly for proper fit.

HOW TO FIRE

⚠ WARNING

Always be sure the firearm is pointed at the target and away from other people, buildings and vehicles before firing. Do not shoot into water.

1. With the muzzle pointed at the target, pull the hammer back to the full cock position with your thumb.
2. With the hammer in the full cock position, disengage the safety by pushing the manual safety button from right to left. The **RED** band will be visible.
3. Squeeze the trigger to fire.



FIG 17

WHAT TO DO IF YOUR FIREARM FAILS TO FIRE

- 1. Misfires** - If you squeeze the trigger and the shot shell or cartridge does not discharge, remain in the shooting position, keep the muzzle pointed in a safe direction and wait for 30 seconds. Then, open the firearm as previously described. The misfired shot shell or cartridge will be ejected from the gun.
- 2. Underpowered Shot Shell or Cartridge** - An underpowered shot shell or cartridge is unusual if the ammunition is new, clean, and factory loaded. However, if you hear an unusual sound or low report, you should stop shooting immediately, keep the muzzle pointed in a safe direction and wait for 30 seconds. Then unload the firearm and visually check both the chamber and bore to make sure that there is no obstruction.
- 3. Extraction** - The extraction system uses a spring-driven extractor to remove the spent shell casing. This system removes the shell casing from the chamber by ejecting it completely, or pushing it partially out of the chamber so the shooter can remove it by hand.

UNLOADING YOUR FIREARM

To unload the firearm, press down on the release lever and pull down on the forend. This will cause the fired or unfired shot shell or cartridge to be ejected from the chamber. Rimfire cartridges and shot shells will fully eject from the firearm, while centerfire cartridges will be partially extracted and need to be removed by hand.

WARNING

Further disassembly of the firearm is not recommended, and should only be attempted by a qualified gunsmith.

ROSSI

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

TAKE DOWN INSTRUCTIONS

If you wish to "take down" your firearm for transport or storage, proceed as follows:

1. Make sure the firearm is unloaded.
2. Unscrew the forward sling swivel under the forend until it is disengaged from the barrel.
3. Pull forend forward and down from the barrel to remove it.
4. Press the release lever down and open the barrel. Pull the barrel out of the receiver.
5. Reassemble in reverse order.

CARE AND MAINTENANCE

WARNING

Before cleaning: (1) point the muzzle in a safe direction, (2) keep your finger off the trigger, (3) push the manual safety button from left to right so the RED band is not visible, (4) press down on the release lever, and (5) pull down on the forend. Visually inspect the chamber, barrel and bore to ensure the firearm is clear and safe to perform cleaning.

In order to keep a firearm safe to use, it must be kept clean and covered with a light film of good quality gun oil to prevent corrosion. The barrel bore should be cleaned and left free of debris.

For normal cleaning, rub it with a lightly oiled cloth. In the same way, proceed with the bore of the barrel. Excess oil should be removed. Dust should be removed from all crevices with a small clean plastic brush.

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

REPAIR INSTRUCTIONS

Your firearm has been designed, engineered and manufactured in accordance with Rossi's specifications.

However, any precision mechanical device may occasionally require adjustment or repair.


All firearms require periodic maintenance and inspection which may reveal a need for adjustment or repair. Have your firearm checked by a qualified gunsmith annually, even if it seems to be working well, because breakage, improper functioning, undue wear, or corrosion of some components may not be apparent from external examination. If you notice ANY mechanical malfunction, STOP USING the firearm. UNLOAD the firearm and take it to a qualified gunsmith immediately.

ROSSI

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

EXPLODED VIEW AND PARTS LIST

This is intended as a generic guide and not a specific model or guide to assembly.

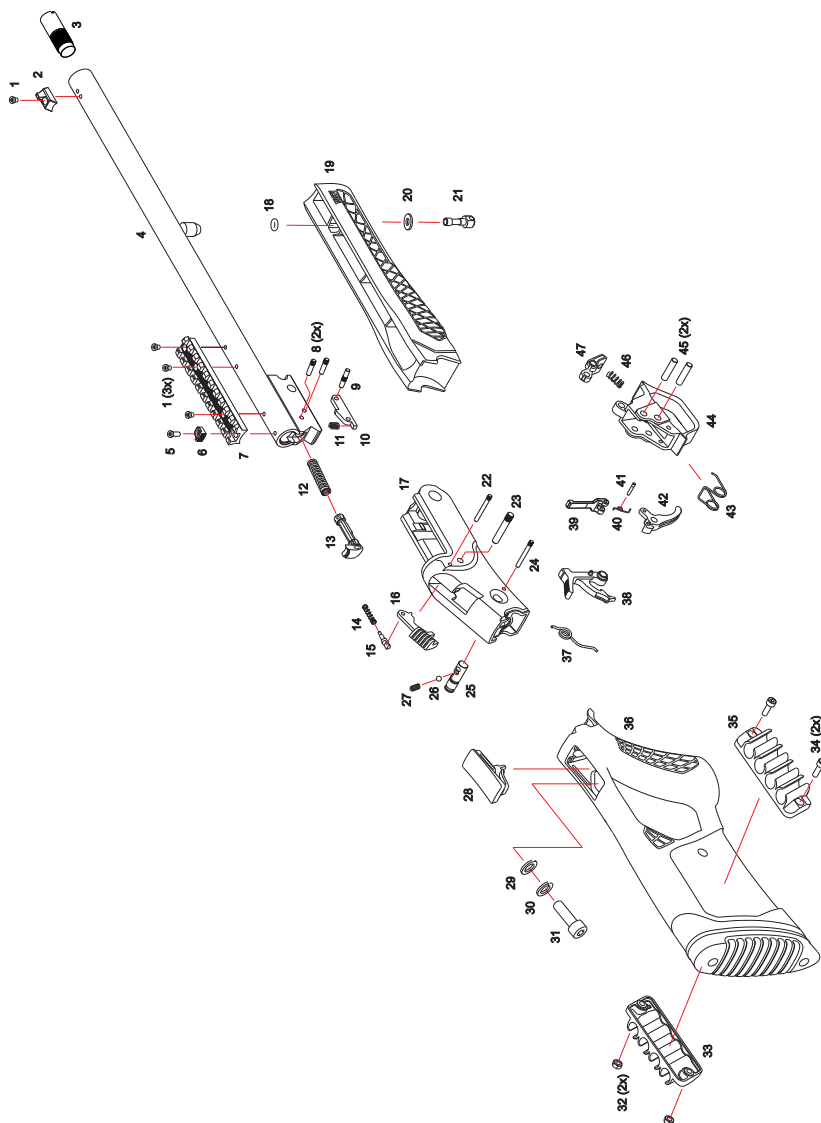

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

1	Screw	31	Screw
2	Front Sight	32	Nut
3	Choke Tube	33	Side Paddle Left
4	Barrel	34	Screw
5	Picatinny Rail Screw	35	Side Paddle Right
6	Rear Sight	36	Stock
7	Picatinny Rail	37	Hammer Spring
8	Extractor Stop Pin	38	Hammer
9	Extractor Lever Pin	39	Transfer Bar
10	Extractor Lever	40	Trigger Spring
11	Extractor Lever Spring	41	Trigger Pin
12	Extractor Spring	42	Trigger
13	Extractor	43	Trigger Spring
14	Firing Pin Spring	44	Trigger Guard
15	Firing Pin	45	Pin
16	Release Lever	46	Locking Plate Spring
17	Receiver	47	Locking Plate
18	O-Ring		
19	Forearm		
20	Washer		
21	Forearm Screw		
22	Opening Lever Pin		
23	Hammer Pin		
24	Trigger Guard Pin		
25	Safety		
26	Ball		
27	Safety Spring		
28	Cover		
29	Washer		
30	Lock Washer		

ROSSI

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

PARTS

Our Service Department maintains a full complement of replacement parts for our firearms of current manufacture. Even though most gunsmiths have the knowledge, training and ability to make the necessary repairs to your firearm, the skill and workmanship of any particular gunsmith is totally beyond our control. Should your firearm ever require service, we strongly recommend that you return it to Braztech. Follow the instructions outlined on the warranty card included with your firearm. Remember, unauthorized adjustments or parts replacement can void your warranty. It is the responsibility of the purchaser to be absolutely certain that any parts ordered from Braztech are of the correct type and are properly fitted and installed by a competent person. **THIS FIREARM IS A PRECISION MECHANISM AND THE IMPROPER FITTING OF PARTS OR IMPROPER MECHANICAL ADJUSTMENT CAN RESULT IN A DANGEROUS MALFUNCTION, DAMAGE TO THE FIREARM, AND POSSIBLE SERIOUS INJURY TO THE SHOOTER OR TO OTHERS.** Therefore, the purchaser and/or installer of parts must accept full responsibility for the correct adjustment of and function of the firearm after such installation has been made or attempted.

ROSSI GUN REPAIR POLICY

Limited Warranty

Rossi® Polymer Survival Rifle

Braztech International, L.C., the exclusive importer of Rossi-brand firearms into the U.S.A., hereby provides the following **ONE-YEAR LIMITED WARRANTY** to the original purchaser of the enclosed Rossi® Polymer Survival Rifle subject to the terms and conditions set forth below.

What does the warranty cover and what is its duration?

Braztech warrants to the original purchaser that the enclosed Polymer Survival Rifle was made free of defects in material, function, and workmanship. For one (1) year after the date of purchase, Braztech promises to remedy any defect in such material, function, or workmanship.

Further, if Braztech cannot remedy any such defects after a reasonable number of attempts within the one (1) year period, Braztech will replace the Polymer Survival Rifle with an exact or comparable model. This Warranty terminates automatically upon the transfer of the Polymer Survival Rifle to any individual or entity other than the original purchaser.

Disclaimer and Limitation of Remedy.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY IMPARTED BY STATE LAW WILL BE LIMITED TO ONE (1) YEAR.

Some States do not allow limitations on how long an implied warranty lasts, so the above-limitation may not apply to you.

ANY AND ALL INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXPRESSLY DISCLAIMED UNDER ALL CIRCUMSTANCES.

Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. **This ONE-YEAR LIMITED WARRANTY** gives you specific legal rights, and you may also have other rights which vary from State to State.

Braztech will not be responsible for:

- 1) Defects or malfunctions resulting from careless handling, unauthorized adjustments or modifications.
- 2) Use of defective or improper ammunition, reloaded ammunition, corrosion, neglect, abuse, ordinary wear and tear or unreasonable use.
- 3) Criminal misuse, negligence or use under the influence of drugs or alcohol.

How do you obtain warranty service?

You must contact Braztech to receive warranty service. You may contact Braztech by calling (800) 948-8029, or in writing: c/o Consumer Affairs Department, 100 Taurus Way, Bainbridge, Ga 39817. Please include a description of the claimed issue, along with your name, address, telephone number, model, serial number, proof of purchase, and date of purchase.

FIREARMS MUST BE SHIPPED UNLOADED. Double check the chamber of your firearm before shipping. If firearms are sent to Braztech in a loaded condition, we are required by law to notify the Federal authorities.

DO NOT INCLUDE AMMUNITION with your firearm. This is a violation of federal law. **DO NOT** include telescopic sights; custom grips, holsters, ammunition or other accessories with any firearm shipped to us.

Braztech is not responsible for shipment damage.

ROSSI

ALWAYS KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.

A WORD TO THE WISE

Most gun accidents happen because the shooter carelessly violates the single most important rule of safe gun handling: **Always keep the muzzle pointed in a safe direction!**

Important: **Do not discard.** Keep this manual with your firearm. Upon change of ownership, transfer this manual with the firearm.



WWW.ROSSIUSA.COM

© Copyright 2017 Braztech International, L.C.
Rossi is a registered mark of Amadeo Rossi, S.A.

The information in this manual is provided as guidelines and directions for the safe use of your firearm. Braztech and/or Rossi cannot be held responsible for the misuse, illegal or negligent use of our products.

We strongly encourage all firearms owners to observe all firearms safety rules.

WARNING: This product contains chemicals known to the State of California to cause cancer, or birth defects or other reproductive harm.

Keep this and all firearms and ammunition away from unsupervised children. Firearms safety is everyone's responsibility.

Read Carefully Before Using Your Firearm